

Daily Spray Gun Maintenance

1. At the end of the day, fill a clean solution cup with warm water and attach cup to gun.
2. Turn the Solution Flow Knob counter-clockwise until the spray gun sprays at full blast.
3. Spray water until water sprays clear.
4. Switch the Air Pattern Adjustor to the opposite direction and continuing spraying water out until water sprays clear.
5. Remove cup from spray gun and press trigger so remaining water in spray gun drains.
6. Press the trigger to drain any water that remains in spray gun.
7. Attach spray gun to hose and spray while no solution cup is attached, this will help speed up the drying process.
8. Wipe the outside of the gun with a towel and warm water, then wipe with a dry towel.
9. When finished, hang spray gun from the MobileBronzer® or Mini Bronzer to allow the gun to drip dry over night.

Tips:

- Do NOT clean the spray gun with any cleaner, only use warm water.
- Spray gun should be rinsed after each day of use, it does not need to be cleaned after every spray session.
- Between spray sessions you may need to take a towel with warm water and wipe off the Spray Pattern Adjustor.
- When attaching or removing the solution cup, hold the solution lid and not the gun handle to prevent the bolts above the lid from loosening.

Spray Gun Maintenance



Problematic Spray Gun Maintenance

1. Remove Spray Pattern Adjustor Ring, Spray Pattern Adjustor, Detent Plate, and Spring.
2. Clean all pieces with warm water then towel dry.
3. Use the cleaning brush included to brush the inside of spray gun, then rinse with warm water.
4. Press the trigger to drain any water that remains in spray gun.
5. Replace Spring.
6. Before replacing Spray Pattern Adjustor, rub a dime-size amount of Barrier Cream around the Spray Pattern Plate to lubricate the metal fittings. This will prevent the Spray Pattern Adjustor from becoming difficult to turn. Note: when attaching the Spray Pattern Plate, the dimples or indents should face you.
7. Replace Spray Pattern Adjustor then Spray Pattern Ring.

Tips:

- It's strongly recommended to never remove Solution Flow Knob.
- If spray gun has not been properly maintained and a build up of solution has occurred, remove Spray Pattern Adjustor Ring, Spray Pattern Adjustor, Detent Plate and Spring then soak spray gun and all pieces in warm water for 20 minutes. Do NOT keep spray gun and pieces soaking in water longer than the 20 minute time frame.

